GRAPHOLAS 12.1

USER MANUAL

28.03.2013

ESKO

© Copyright 2013

Esko-Graphics Imaging GmbH, 25524 Itzehoe, Germany

All rights reserved. This document and the information and instructions contained therein is the property of Esko-Graphics. These documents contain the product descriptions according to their current state at the time of publication, subject to confirmation. No guarantees are granted or expanded upon by this document. Furthermore, Esko-Graphics will not guarantee for illustrations relating to the usage of the products or for results from using the software or the use of the information contained herein. Esko-Graphics is not responsible for direct or indirect damages or damages caused as logical consequence or latent damages resulting from the use of the software or from the impossibility of using the software or of the information contained herein.

The technical data contained herein and the content of this manual is subject to change without prior notification. Revisions may be issued from time to time that inform of such changes and/or supplements.

No part of this document may be reproduced, transferred, electronically stored or published, irrespective of the reasons without written permission and irrespective of the method or means used, i. e., electronic, mechanical, by printing, microfiche, etc.

These documents replace all previous versions.

Grapholas® is a registered trademark of Esko-Graphics Imaging GmbH.

Cyrel®, Cyrel® Digital Imaging System and Cyrel® Digital Imager (CDI) are registered trademarks of DuPont.

Microsoft and the Microsoft Logo are registered trademarks of Microsoft Corporation in the USA and other countries.

The software from Esko-Graphics may contain the "RSA Data Security, Inc. MD5 Message-Digest Algorithm".

JDF and the JDF Logo are trademarks of the CIP4-Organisation. Copyright 2001 The International Cooperation for the Integration of Processes in Prepress, Press and Postpress (CIP4). All rights reserved.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems in the U.S. and/or other countries.

Some parts of this software use technologies of JGoodies, Barbecue (Copyright 2003, International Barcode Consortium), and Jakarta (licensed by Apache: www.apache.org/licenses/LICENSE-2.0.txt).

All other product names are trademarks or registered trademarks of their respective owners.

Table of Contents

1 IMPORTANT NOTE 6

2 SYSTEM REQUIREMENTS 7

3 GRAPHOLAS SERVICE 8

1. ANTIVIRUS SOFTWARE ON CDI MACHINES 9

4 FIRST START-UP OF THE SOFTWARE 10

4.1 Entering the License Key 10

4.2 Setting the Language 10

5 MANAGING DATA SOURCES 11

5.1 Adding a Local Data Source 11

5.2 Adding an FTP Data Source 12

5.3 Changing an Entry 13

5.4 Deleting an Entry 13

5.5 Saving Settings 13

6 WORKING WITH INTERCHANGEABLE LENSES (OPTIONAL) 14

6.1 Starting the Service 14

6.2 Changing to Another Profile 14

7 ADJUSTING THE "MERGER" USER INTERFACE 15

7.1 Password-Protecting Functions 15

7.2 Changing the Password 16

7.3 Entering a Password to Change Settings 16

8 MERGER 17

8.1 Quick Start 17

8.2 The User Interface 18

8.3 Toolbar 19

8.3.1 Loading Images 20

8.3.2 Displaying Image Data 20

8.3.3 Plate Size and Partial Plate 20

8.3.4 Frames and Cutting Lines 21

8.3.5 Adding Text 21

8.3.6 Information on Grids and Image Position 22

8.3.7 "Step & Repeat" and Seamless Option for Sleeves 22

8.3.8 Mirroring and Inverting 23

8.3.9 Output Options 23

8.3.10 Generating a Job 24

8.3.11 Cropping and Rotating Images 24

8.3.12 Automatic Positioning of the Images 24

8.3.13 Manual Cropping 25

8.4 Menu Bar 26

8.4.1 Unloading Images 26
8.4.2 Unloading Positioned Images 26
8.4.3 Selecting the Working Directory 26
8.4.4 Saving the Image Arrangement 26
8.4.5 Loading the Image Arrangement 27
8.4.6 Deleting the Image Arrangement 27
8.4.7 Automatic Positioning of the Images 27
8.4.8 Automatic Positioning of New Images 27
8.4.9 Removing Images from the Working Surface 27
8.4.10 Displaying File Names 27
8.5 Working Surface and Status Bar 27
8.6 Displaying Plate Use 28
8.7 Managing Plate List 28
8.7.1 Creating a New Plate 29
8.7.2 Changing the Plate 31
8.7.3 Deleting the Plate 31
8.8 Exposing Plate Borders 32
8.9 Templates 32
8.9.1 Creating a Template 32
8.9.2 Loading a Template 33
8.9.3 Modifying a Template 33
8.9.4 Moving a Template 33
8.10 Job Information 34
8.11 Loading Images via "*Drag & Drop*" 35
8.12 "Unique ID" 35
8.13 Basic Merger Settings 36
9 EXPOSER 38
9.1 Status Displays and Controls 39
9.2 Vacuum Display and Position Control 39
9.3 Job List 39
9.4 Machine Controls 40
9.5 Changing the Priority 40
9.6 Job Information 41
9.7 Starting a job 42
9.8 Focus Search 42
9.9 Zero Point Search for "Sleeves" 43
9.10 Determining the Full HD UV / Pixel+ Parameters ("Steptest") 43
9.11 UV Exposure "UV Inline" (Option) 43
9.12 Control of the Automaton 44
9.12.1 UV Back Exposure 44
9.12.2 Control and Status Displays 44
9.13 Control of the Tailstock – CDI Cantilever 45
9.14 Interlocks and Errors 45
10 SUPPORT EUROPE 47

1 Important Note

The CDI needs a constant flow of data for the imaging process. In order to avoid any disturbances, the "Merger" cannot be used during this time.

In most cases, a cancellation of the imaging process causes the loss of the plate for which ESKO cannot be held responsible.

2 System Requirements

The following minimum requirements must be met:

- Pentium D processor
- 2 GB RAM
- Network board
- screen resolution of 1280 x 1024 pixels
- CD-ROM drive
- 32-bit operating system
- Microsoft Windows XP
- disabled firewall
- disabled UAC (User Account Control)

The index and file names may not include special characters, umlauts or spaces. An underscore "_" is the only permitted special character and can be used as a substitute for a space.

3 Grapholas Service

After the user login, the Grapholas Service is started in stopped mode.

The state of the service is shown in the Windows taskbar. Since starting the service causes movements in the machine, it is started manually by right-clicking the respective button.

Only in exceptional cases, the service is faulty:

service started

service stopped

service faulty

1. Antivirus Software on CDI Machines

Each CDI is equipped at the factory with the antivirus software "Microsoft Essential". The settings are already selected so that the function of the CDI will not be impaired.

In case the CDI is not connected to the internet, this software must be updated manually.

- Current version of "Microsoft Essential":

  http://www.microsoft.com/Security_essentials/default.aspx?mkt=en-gb

- Current version of virus database (update each week):

  http://download.microsoft.com/download/DefinitionUpdates/mpam-fe.exe

In case a different antivirus software is used, the following settings must be checked and adjusted if needed:

- The directories "C:\bsl\run" and "d:\data" may not be monitored.
- LEN files may not be monitored.
- The processes "cmot.exe", "gravur.dma.exe" and "gravur.job.exe" may not be monitored.

The software "AV-Antivir" is not recommended as when using this software, it considered parts of the Grapholas software to be a virus and deleted them.

4 First Start-up of the Software

LEN and TIF files are prepared for exposure on a CDI using the "*Merger*". It positions the images on the printing plate, and can also rotate, mirror, crop and invert the images as required.

The *"Viewer"* is used to display and measure the LEN/TIF files. The angle and the rasterization can also be measured.

The *"Exposer"* controls the CDI with the jobs prepared by the *"Merger"*.

All important settings are copied over during an update. If the software is being installed for the first time, the network settings must be set.

4.1 Entering the License Key

During initial installation or when updating from an older version, the license key must be entered to start the *"Merger"*:

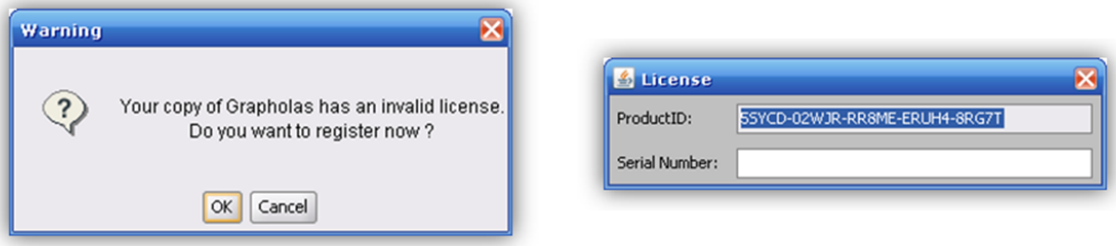

The ESKO-Service provides a serial number for this *"ProductID"* which needs to be entered in the *"Serial Number"* field and confirmed by ENTER. The license can be subsequently changed with the *"New License"* program in the Windows Start Menu under "Esko - Digital Flexo Suite - System".

4.2 Setting the Language

In the "Merger", the language can be changed under *"Edit – Change language"*:

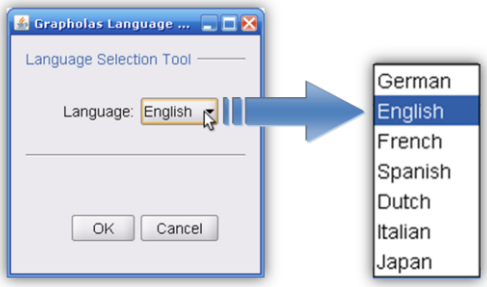

5 Managing Data Sources

The image data can be loaded from the local hard drive, over a network release, or via FTP. With regard to data security, transmission via FTP protocol is to be preferred over network release.

The *"User Data"* path entered during installation is already released as a network drive. Additional data sources can be set up under "Edit – Data Source".

5.1 Adding a Local Data Source

Local data sources can be located on the hard drive of the computer or accessible in the network via "share" function.

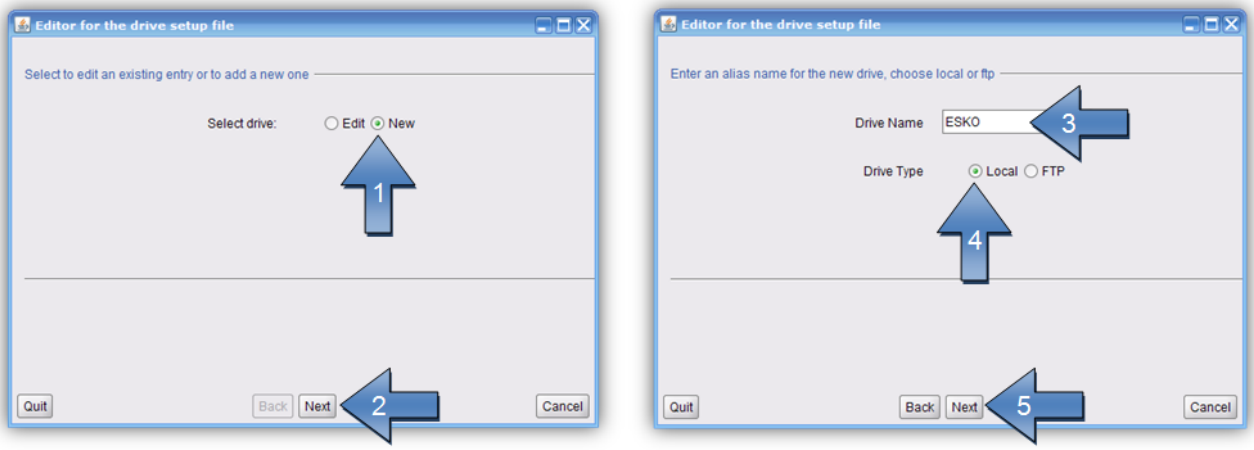

The name of the data source *"Drive Name"* (3) will be shown later in the "Load" dialogue.

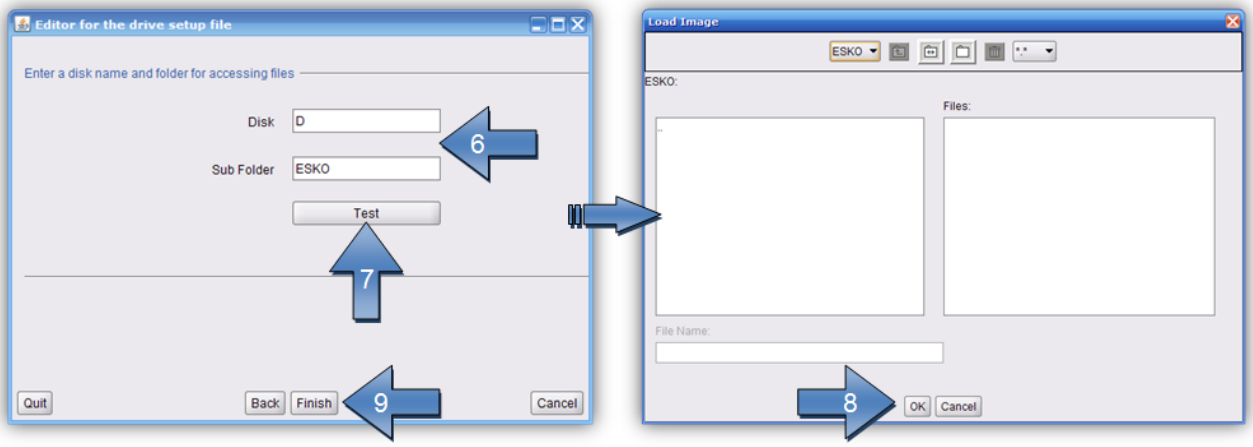

"Disk" and *"Sub Folder"* (6) designate the drive letter and the directory containing the data.

Clicking "Test" (7) opens a new window with the data source set up. "Finish" (9) completes the process. You can always switch to the previous page by pressing *"Back"*.

5.2 Adding an FTP Data Source

The FTP server of the data source requires a virtual directory. For a detailed installation manual, refer to *"Digital Flexo Suite 101 Installation"*.

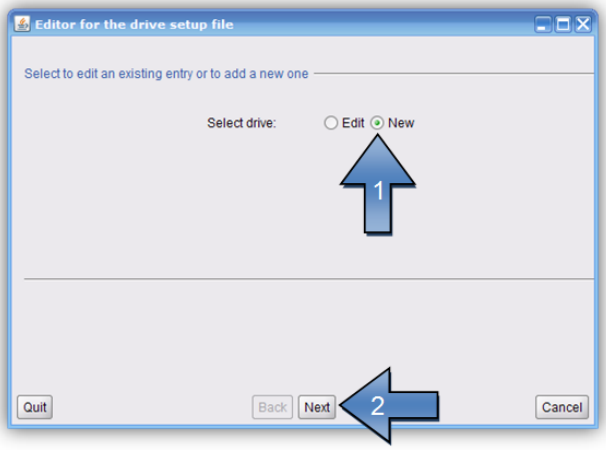

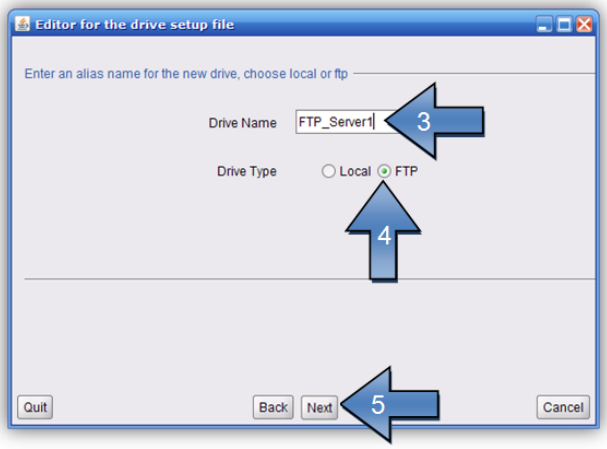

The name of the data source *"Drive Name"* (3) will be shown later in the "Load" dialogue.

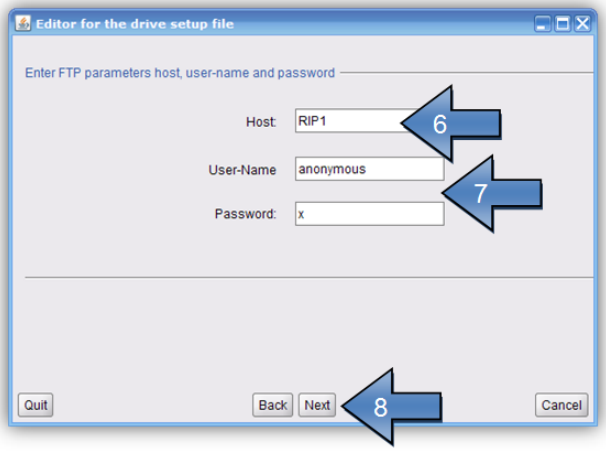

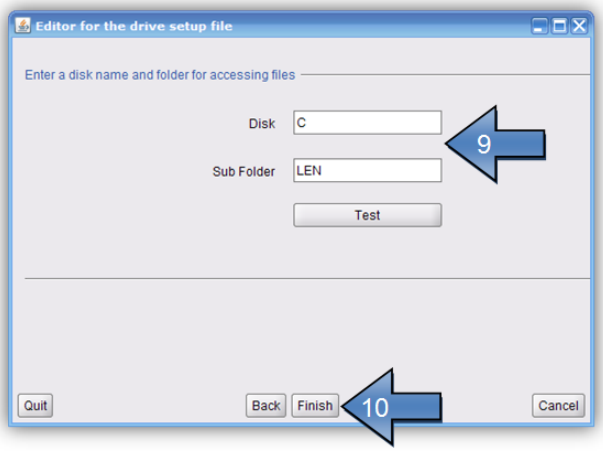

Enter the IP address or the network name in the *"Host"* field (6). Enter the *"User Name"* (7) and the *"Password"* (7) as shown in the illustration if the FTP server was installed as specified.

"Disk" and *"Sub Folder"* (9) designate the virtual drive and the directory containing the data. Should no virtual directory be available, leave the *"Disk"* field empty.

Clicking "Test" opens a new window with the data source set up. "Finish" completes the process. You can always switch to the previous page by pressing *"Back"*.

5.3 Changing an Entry

The settings of the data source can be subsequently changed.

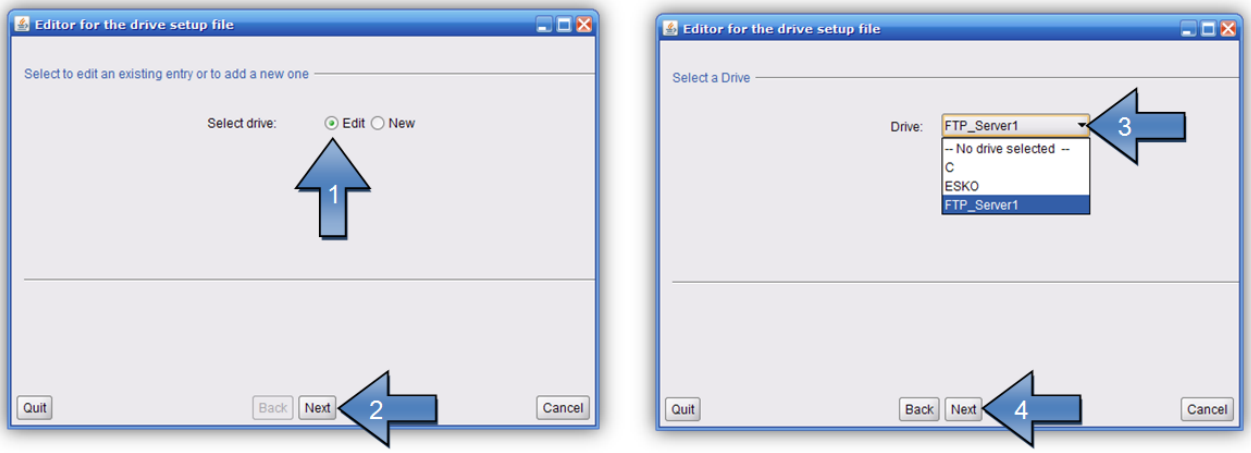

After selecting the *"Drive"* (3), you can change the following settings.

5.4 Deleting an Entry

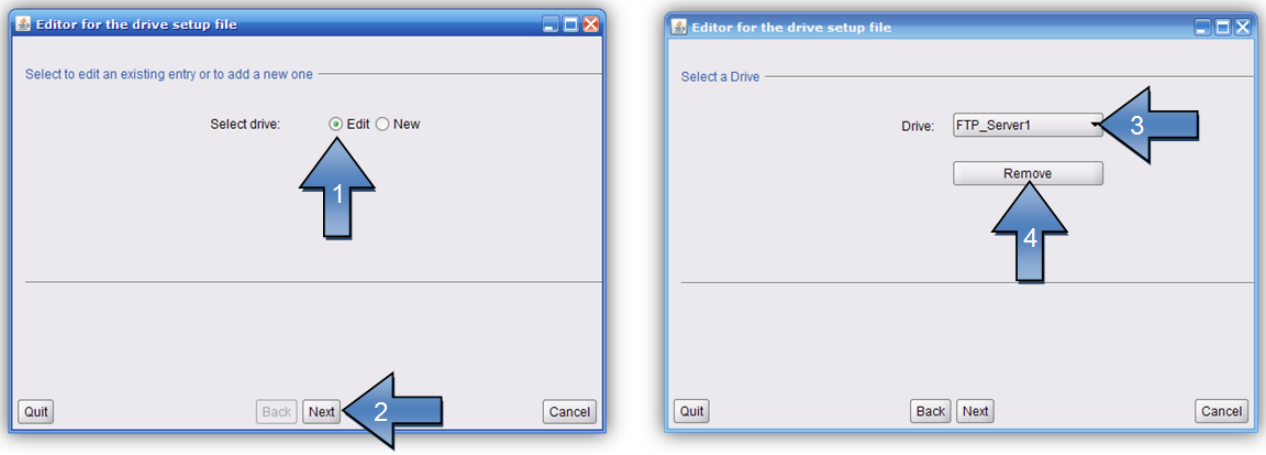

After selecting the *"Drive"* (3), you can remove it by pressing *"Remove"* (4).

5.5 Saving Settings

Exiting via *"Quit"* opens a new window prompting whether you want to overwrite the current settings.

Pressing *"OK"* saves the current settings.

6 Working with Interchangeable Lenses (Optional)

Optionally, the CDI can be equipped with interchangeable lenses. This allows you to use two different resolutions like "Standard" and "HighRes" or "HighRes" and "Secuflex".

Here, the software makes use of two profiles which must be selected when starting the service. The optics automatically configures the according lens system. An Esko technician sets up the system.

IMPORTANT: The jobs are saved separately for each profile. In case you want to send jobs from a PlatePrep, you need to select the correct profile first.

6.1 Starting the Service

As before, you must start the service manually after switching on the CDI. The service menu provides an overview of the existing profiles:

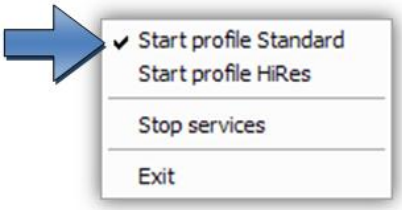

The service is started by left-clicking on the desired profile.

The checkmark in front of the profile indicates that this profile is active even though the service has not been started yet.

6.2 Changing to Another Profile

In order to change the profile, the service must be stopped first (1). Before stopping the service, close the "Merger" and the "Exposer".

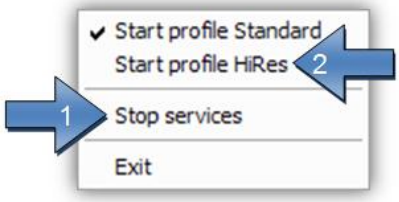

The service is started again by left-clicking on the new profile.

7 Adjusting the "Merger" User Interface

The user interface and some of the functions of the "Merger" can be customised and protected with a password (*"Edit – Configuration"*):

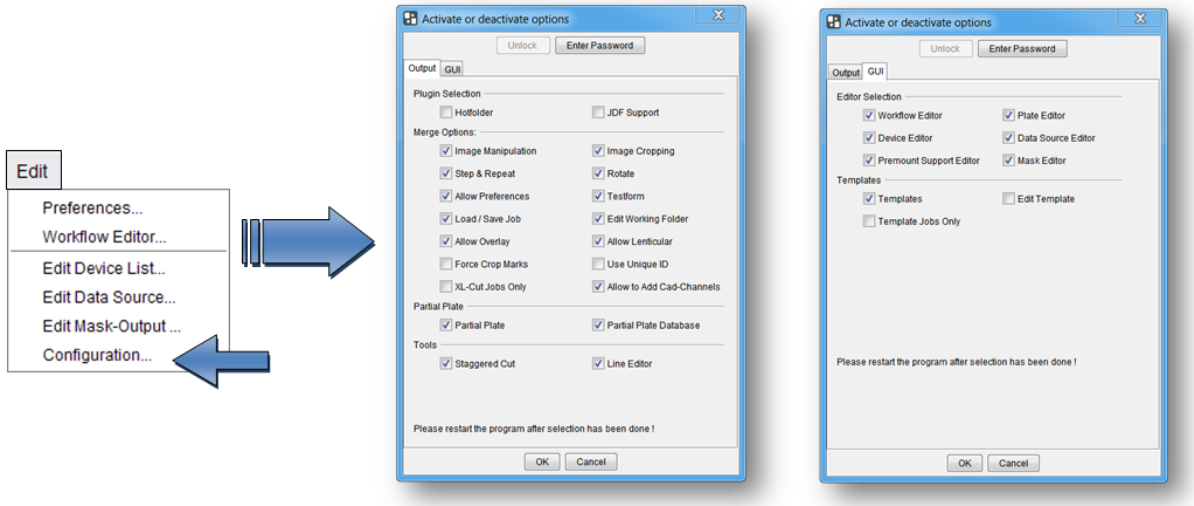

7.1 Password-Protecting Functions

Left-clicking on "*Enter Password*" opens a new window in which the password is entered twice and confirmed with "*Close*":

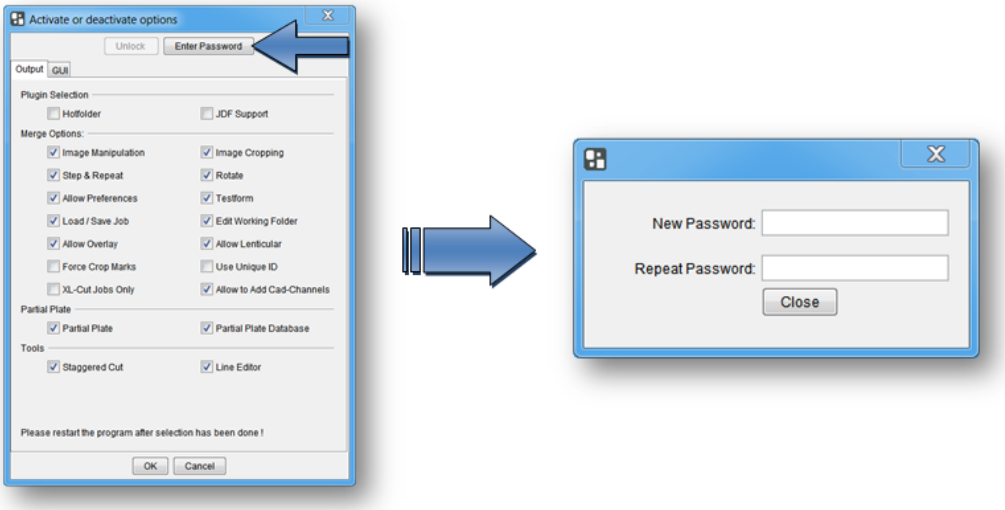

7.2 Changing the Password

Left-clicking on "*Change Password*" opens a new window in which the current password is entered once and the new password is entered twice. "Close" confirms the input:

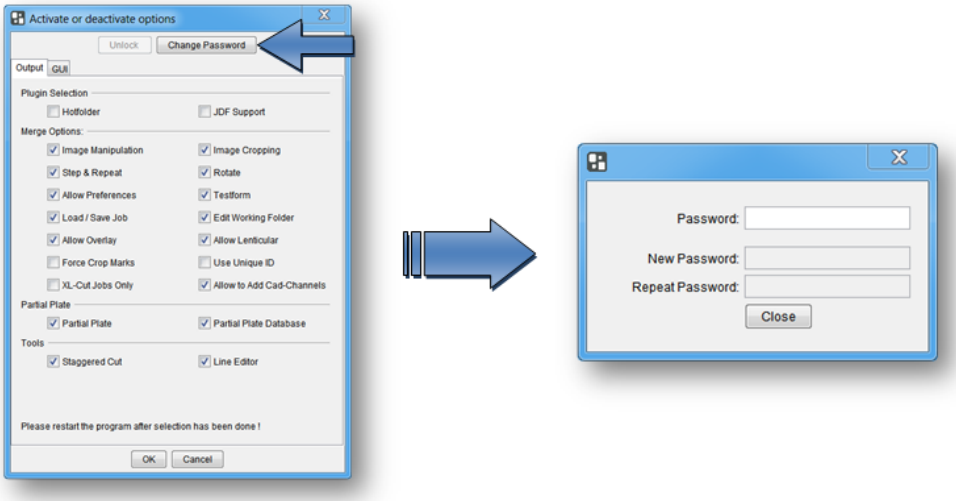

7.3 Entering a Password to Change Settings

Left-clicking on "*Unlock*" opens a new window in which the current password is entered. "Close" confirms the input and enables the input mask:

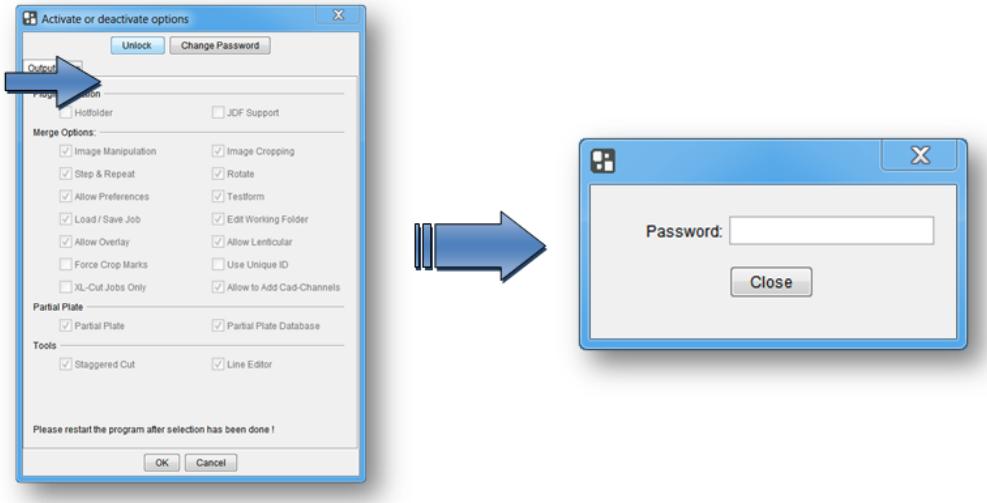

8 Merger

The *"Merger"* is used to load the image data from the local hard drive or from the network and to send it to the preselected CDI.

In addition, simple tools such as "mirror", "crop" and "rotate" are available.

8.1 Quick Start

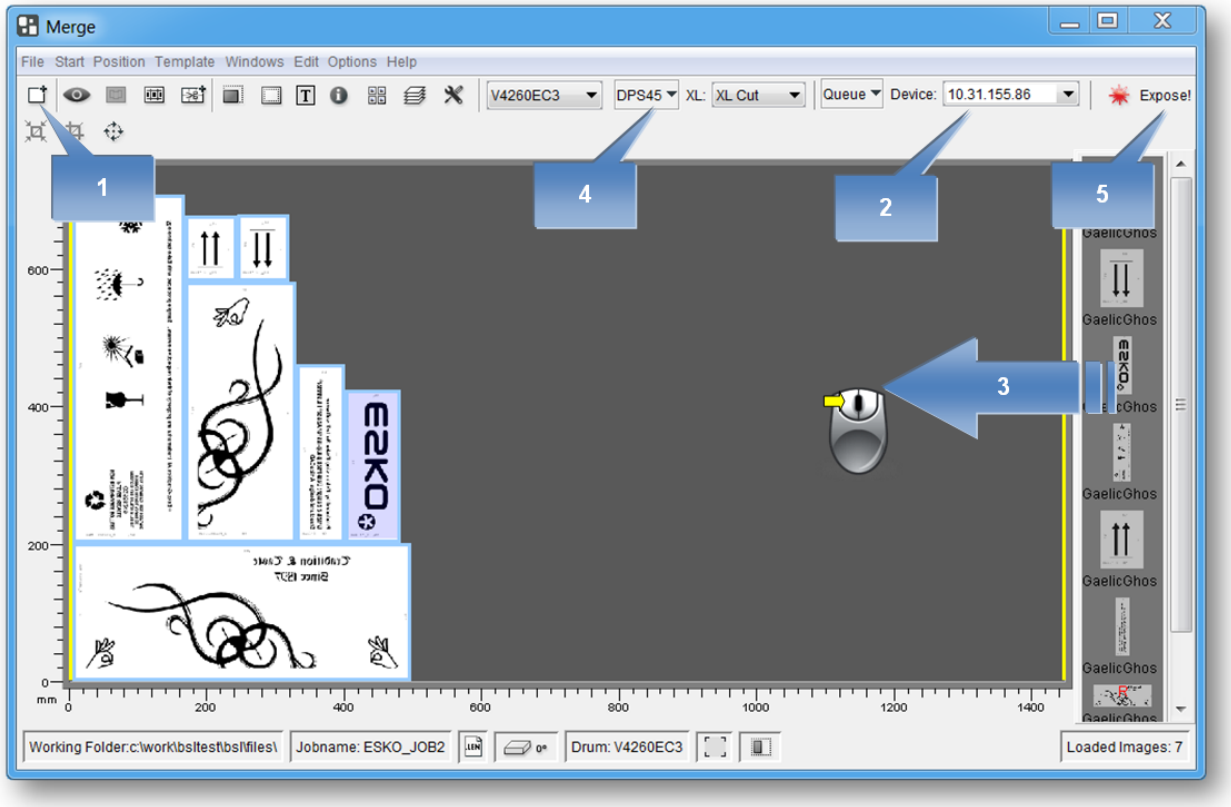

1 Start the "Merger" and load the required images. They are displayed in the image gallery (on the right).

3 Position the images on the working surface. Right-click on the images or the working surface to display additional information.

4 Select the required plate. Right-click on the plate to display additional information.

5 Send the job.

8.2 The User Interface

The "Merger" can be divided into four areas:

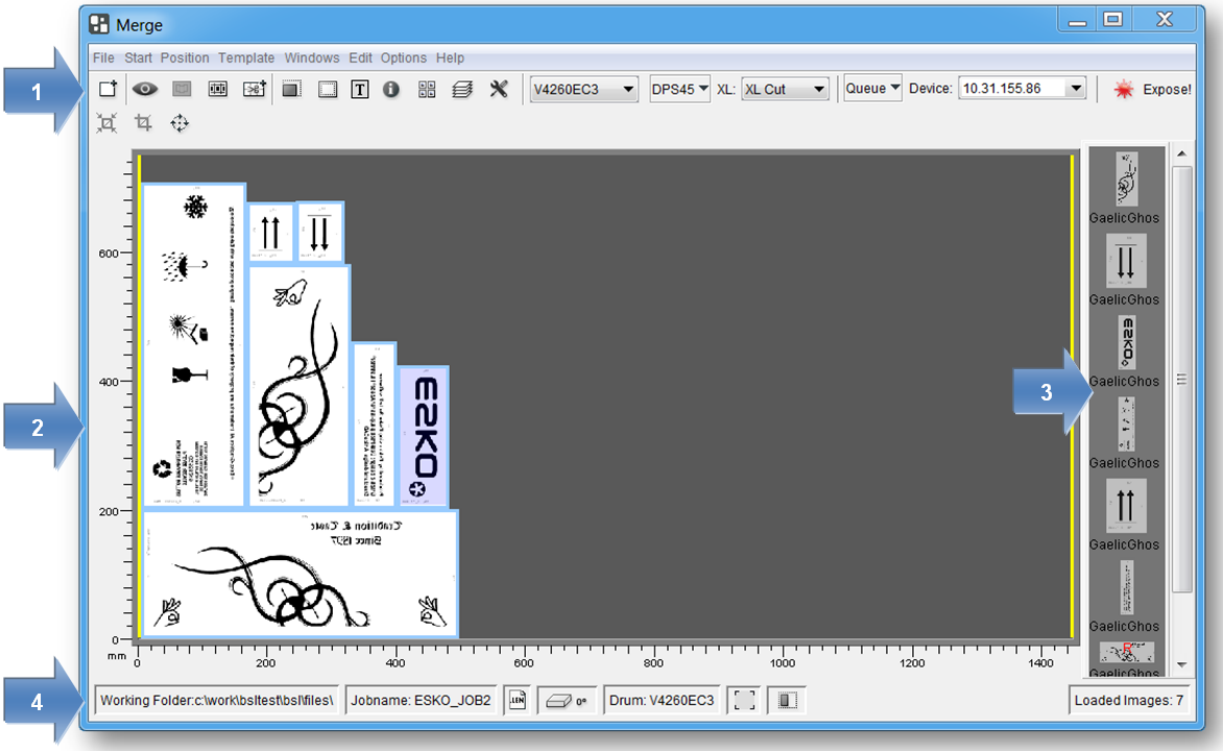

Area 1: menu bar / toolbar with icons for the most important options

Area 2: working surface on which the images are positioned

Area 3: display of loaded image data

Area 4: status bar - display of the most important settings

8.3 Toolbar

All important functions are listed in this area. The toolbar is subdivided into six areas:

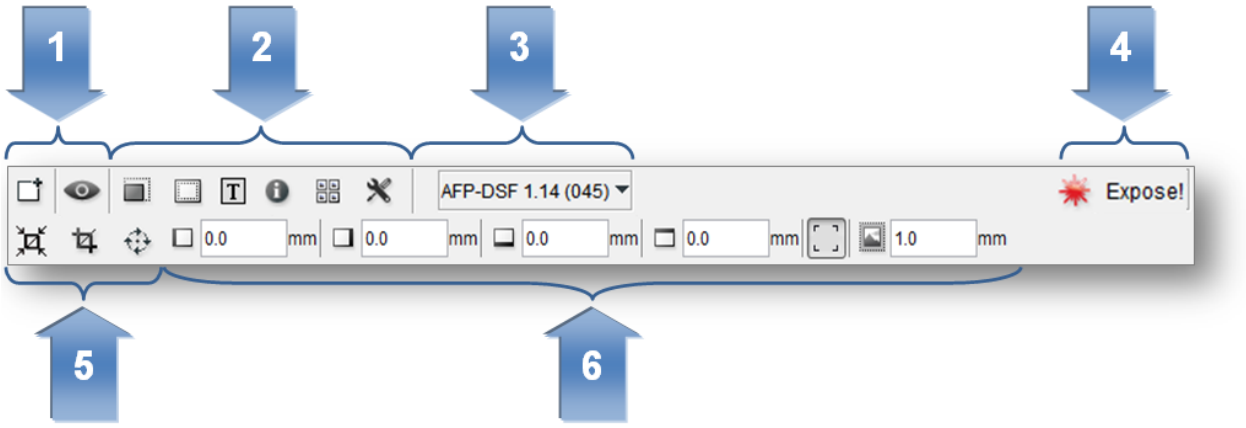

1 Opens a dialog box to load image files and opens the *"Bitmap Viewer"*.

2 Activates additional functions in area 6 to adapt the output.

3 Allows to set the data output, for example, the drum, the plate and the CDI.

4 Opens a dialog box to send the job.

5 Allows to modify the image data, for example, rotating and cutting.

6 Area for the various functions selected in area 2.

If some required functions are not displayed, they can be activated in the "Merger" configuration settings.

8.3.1 Loading Images

Ctrl + E

calls up a file dialog box in which the LEN or TIF files can be selected.

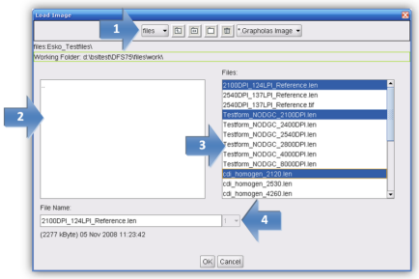

1 Selection of network shares.

2 Display of directories.

3 Display of files. By pressing the *"Control"* or the CAPS button together with the left mouse button, several files can be marked simultaneously; they can then be loaded by pressing *"OK"*. Single files can directly be loaded by double-clicking them.

4 Multiple loading of the files.

8.3.2 Displaying Image Data

Opens the *"Bitmap Viewer"*.

8.3.3 Plate Size and Partial Plate

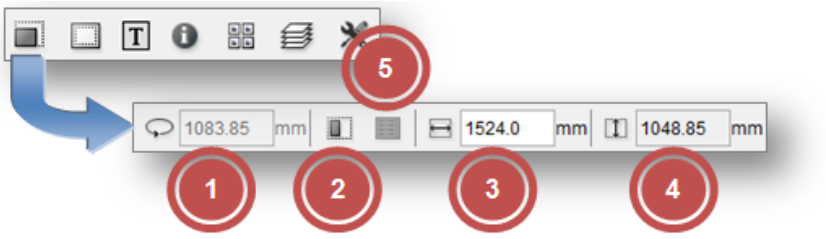

1 Display of the drum circumference – This value can be changed for sleeves.

2 Switchover to partial plate – In this mode, the vacuum on the CDI is not analysed and is reduced to a lower, safer speed.

3 Allows to set the plate width in partial plate mode.

4 Allows to set the plate height in partial plate mode.

5 Display of the list of partial plates – Plate width and plate height are selected from a list:

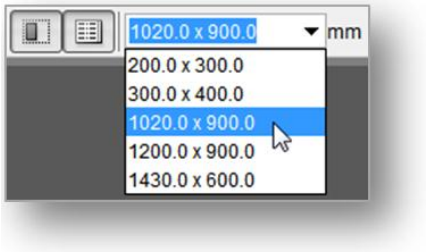

The data is entered in the format 'width x height'. New values can be entered in this format and can be added to the list. To delete an entry, select said value and press the "Delete" key.

8.3.4 Frames and Cutting Lines

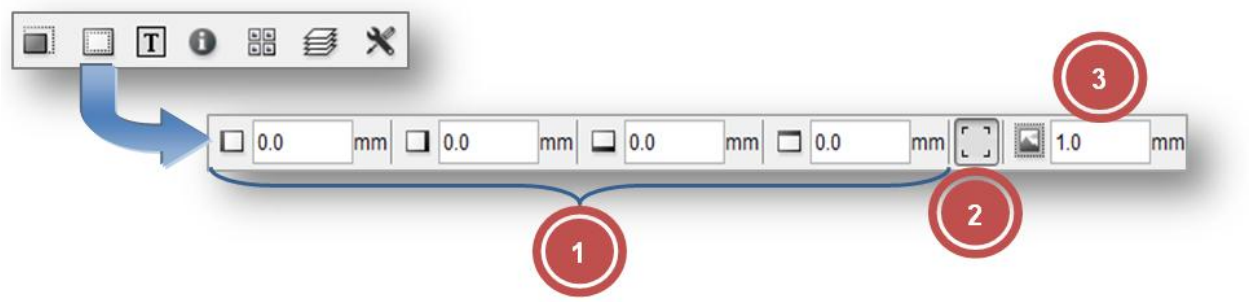

1 Allows to enter a frame area which is not available for the imaging process. The area is marked red.

2 If activated, cut marks are added in the corners of each image.

3 Distance between cut marks and image.

8.3.5 Adding Text

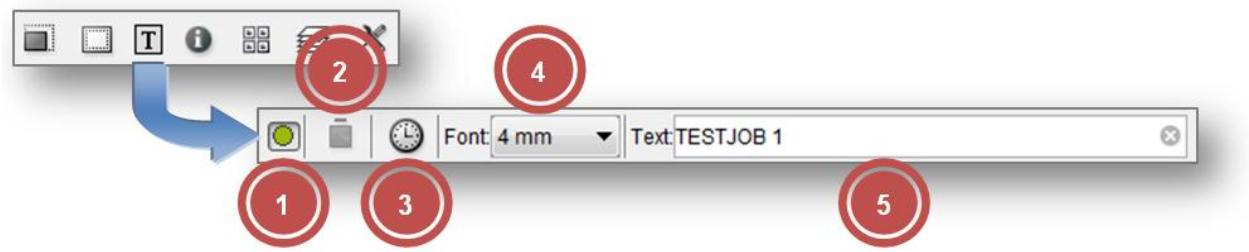

1 Allows to activate the text function for the selected image. A frame is automatically added to all images.

2 Allows to switch the position (top or left).

3 Allows to add an image name together with a date and time stamp.

4 Selection of the text size.

5 Input field for the text. The text should not be longer than the image width or height. The position and width of the text is marked in yellow on the working surface.

The text can be deleted by clicking on the "X" at the end of the input field.

8.3.6 Information on Grids and Image Position

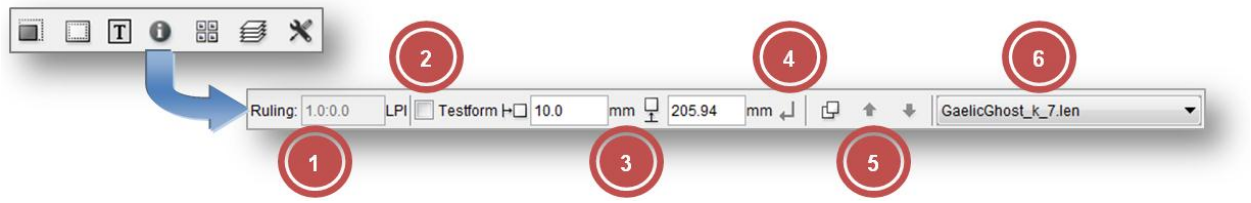

1 Allows to enter the raster count and the angle if they have not yet been included in the image. Images without this information are marked in red on the working surface.

2 Allows to mark an image as a test wedge. For this image, the output optimisation function is deactivated to increase productivity. If these two fields are highlighted in grey, then they are irrelevant for the selected CDI.

3 Allows to display and change the current image position.

4 Confirmation of the changed image position. The image is not positioned until the changed image position is confirmed.

5 Allows to activate the overlaying option. The images can be positioned on top of each other. Using the arrows, the selected image can be positioned above or below another image.

6 Allows to display and change the image to make further changes.

8.3.7 "Step & Repeat" and Seamless Option for Sleeves

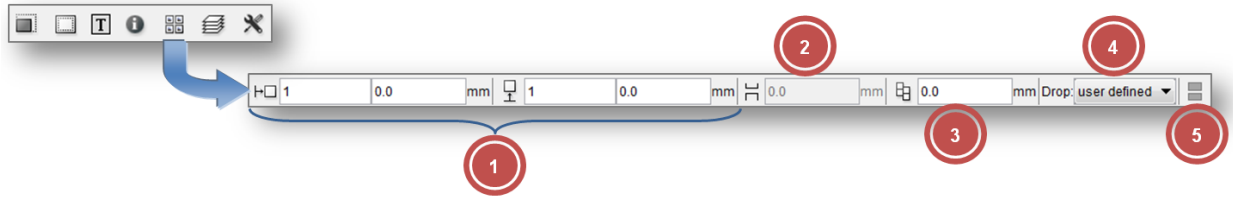

1 Allows to enter the number of repetitions in horizontal and vertical direction. It is possible to set a gap between the images.

2 Displacement of the image above the zero point of the sleeve (5 activated).

3 Offset of the images to each other when horizontal repetition is selected (5 activated).

4 Predefined offset of the images to each other (5 activated).

5 Activates the seamless option. If the image is smaller than the circumference, a gap will be automatically added and repeated in vertical direction if possible.

8.3.8 Mirroring and Inverting

If this icon is not displayed, it can be displayed by selecting "Image Manipulation" under *"Options - Configuration"*.

Allows to mirror (horizontally or vertically) and invert the selected image. "ymir", "xmir" or "inv" is added to the new files.

8.3.9 Output Options

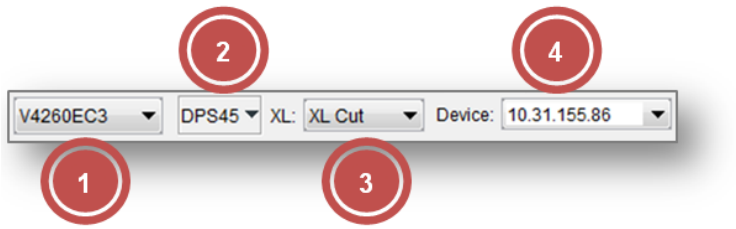

1 Selection of the drum on the CDI. This option is only shown if more than one drum or the drum and the sleeve have been set up on the CDI.

2 Selection of the plate. To ensure an optimum imaging result, the right plate needs to be selected. Additional information such as "UV Inline" and "Full HD Flexo" is stored on the plate.

Normal plates are marked with a circle and Inline UV plates are marked with a square.

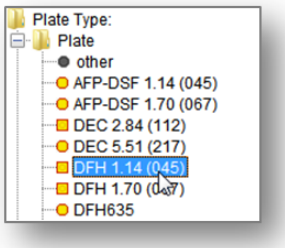

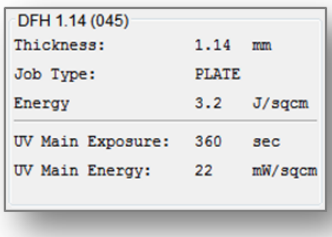

Right-clicking the plate entry displays information on the plate properties.

Only the plate types which fit the selected drum are displayed.

For more information, refer to chapter *"Managing the Plate List"*.

3 Selection of the required Kongsberg settings. If activated, a yellow bar is visible on the left or on the bottom in the "Merger".

The cutting file for the Kongsberg is stored in the directory which was selected for this setting.

For more information, refer to chapter *"Kongsberg Output (XL CUT)"*.

4 Selection of the output device. CDIs and TIF output devices are listed separately.

8.3.10 Generating a Job

Ctrl + E

opens a dialog window in which the job name can be entered. Pressing "OK" sends the job.

8.3.11 Cropping and Rotating Images

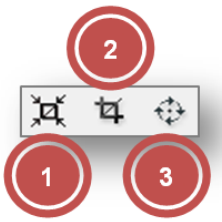

1 Automatic cropping of the selected images. Unused frame areas are removed.

Right-click the icon to undo the changes.

The distance to the "Bleed" pixels can be set in the "Merger" properties. If the image contains "Staggered Cut" information, the image is cut on the cutting line.

2 Opens a new window in which the image can be cut. For more information, refer to chapter *"Manual Cropping"*.

3 Rotates the selected images by 90°. The rotated files are generated when sending the data to the output device. Depending on the resolution, this may take some time.

8.3.12 Automatic Positioning of the Images

The images loaded in the "Merger" can be positioned automatically.

Press ***Ctrl + a*** to automatically reposition all images. Already positioned images are removed from the working surface.

Press ***Ctrl + h*** to automatically position all images which have not yet been positioned. Already positioned images are **not** removed in this case.

As soon as more than one image has been marked (***Ctrl + left mouse button***), only these images will be used for automatic positioning.

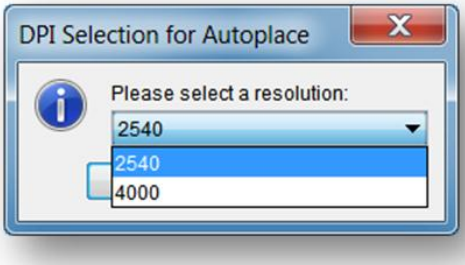

Images with different resolutions cannot be sent to the CDI on a plate. If more than one resolution is available for automatic positioning, a selection is displayed.

Only the images with the selected resolution are positioned.

The way how the images are positioned can be determined in the basic settings of the "Merger". If the images must be cut manually afterwards, "Cut-Optimised Positioning" can be used.

8.3.13 Manual Cropping

opens a new window in which the image can be cropped:

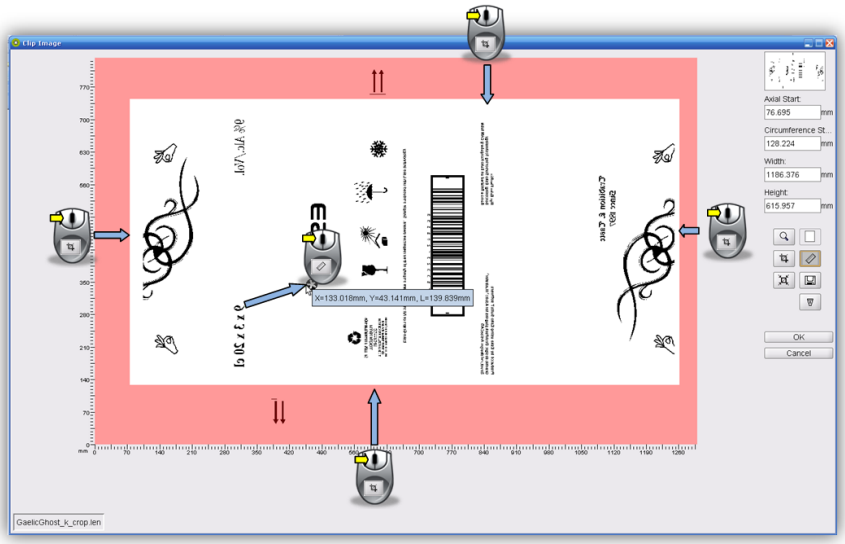

Starting from the frame area, a lasso can be pulled open by pressing and holding down the left mouse button and pulling the mouse across the working surface; or the exact lasso size can be entered in the four input fields on the right-hand side (1).

The distance between two positions in the image can be measured by pressing and holding the left mouse button down.

Individual sections of the image can be enlarged with a square magnifier by pressing and holding down the left mouse button and pulling the mouse across the section of interest. Using the arrow keys on the keyboard, the image section can be moved in the desired direction.

displays the entire image.

performs the automatic cropping.

sets back all cutting edges.

saves the current image section as a new LEN file.

Manual cropping is not available for LEN files of the *"PlatePatcher"* and the *"Staggered Cut"*.

8.4 Menu Bar

Only the additional functions which are not listed in the toolbar are described. The menu bar is located above the toolbar.

8.4.1 Unloading Images

"File - Unload Image" (Ctrl + u) removes the selected image from the "Merger". The file is not deleted from the hard drive.

8.4.2 Unloading Positioned Images

"File - Remove All Positioned Images" (Ctrl + d) removes all images from the "Merger" which are positioned on the working surface. The files are not deleted from the hard drive. This is useful when the job was sent and several images are still in the queue.

8.4.3 Selecting the Working Directory

"File - Select Working Folder" (Ctrl + w) changes the working directory in which all images are copied or moved during the loading process. This option is not available if images are loaded.

8.4.4 Saving the Image Arrangement

"File - Save Plate" (Ctrl + s) saves the compiled images and the exposure parameters as plate. When the compiled images are sent to the CDI, the plate is automatically saved under the entered name.

"File - Save Plate as" saves the compilation under another name.

8.4.5 Loading the Image Arrangement

"File - Load Plate" (Ctrl + L) loads a previously saved or sent compilation with all parameters. All currently loaded images are removed.

8.4.6 Deleting the Image Arrangement

"File - New Plate" (Ctrl + n) removes all images from the "Merger" and resets the parameters.

8.4.7 Automatic Positioning of the Images

"Position - Auto Arrange Images" (Ctrl + a) automatically positions as many loaded images as possible on the working surface. Beforehand, images which were already positioned on the working surface are removed. The type of positioning can be selected in the "Merger" properties.

8.4.8 Automatic Positioning of New Images

"Position - Auto Arrange New Images" (Ctrl + h) automatically adds the loaded images to the compilation on the working surface. Already positioned images are not removed.

8.4.9 Removing Images from the Working Surface

"Position - Unplace all" (Ctrl + u) removes all images from the working surface. The images are not unloaded.

8.4.10 Displaying File Names

"Windows - Display Names" shows the file names in the images positioned on the working surface.

8.5 Working Surface and Status Bar

The working surface shows the available area on the plate. It is not necessary to enter the upper and lower borders as the entire working area is shown.

The loaded images are pulled from the right queue on the working surface by holding down the left mouse button.

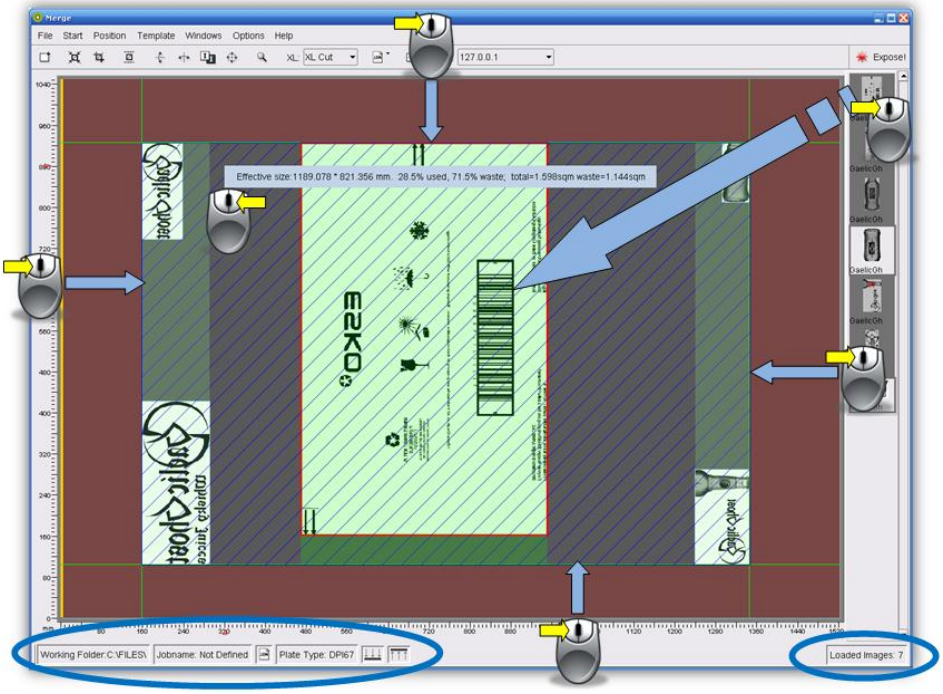
File Start Position Template Windows Options Help
Effective size:1189.078 * 821.356 mm; 28.5% used, 71.5% waste; total=1.598sqm waste=1.144sqm
Working Folder:C:\FILES\
Jobname: Not Defined
Plate Type: DPI67
Loaded Images: 7

In addition, guides can be pulled from the grey frame area by holding down the left mouse button. The images cannot be positioned in the red area. The guide can be removed again by right-clicking on the grey frame area.

Right-clicking the image file displays information on the image.

The status bar shows the current settings and the number of loaded images.

8.6 Displaying Plate Use

Right-clicking on the working surface displays information on the plate size and the use of the plate.

	Width: [mm]	Height: [mm]	Used [%]	Waste [%]	Used [sqm]	Waste [sqm]
Partial Plate	947.744	277.462	49.4	50.6	0.263	0.133
Full Plate	1000.0	800.0	16.2	83.8	0.8	0.67

The "Partial Plate" line shows the values for the marked area. The "Full Plate" line refers to the entire work area.

8.7 Managing Plate List

"Edit – Edit Plate List" opens a new window where you can delete, change and create new plates.

"Cancel" aborts the process – no data is changed. By pressing ***"Quit"***, the window is closed. ***"Next"*** shows the next window.

8.7.1 Creating a New Plate

First select the desired medium ***"Plate Type"*** (1), then check ***"New"*** (2) and press ***"Next"*** (3) to go to the next menu:

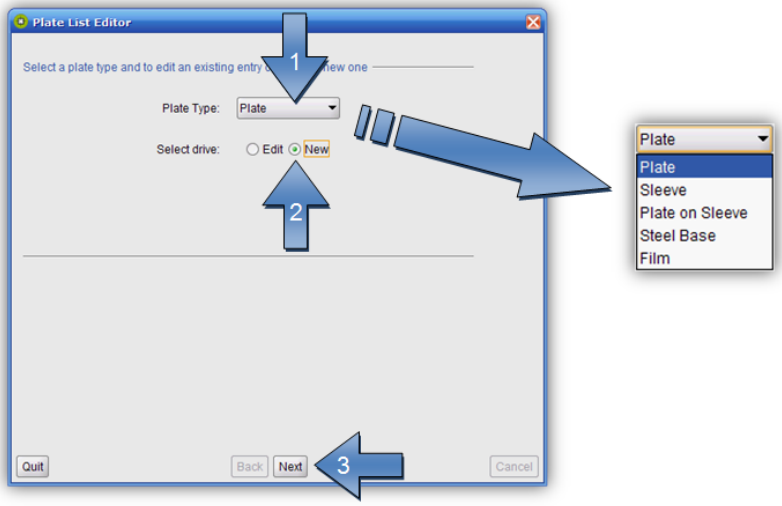

- "Plate" – Flexo plates
- "Sleeve" – print sleeve of DuPont and Flint
- "Plate on Sleeve" – Flexo plates mounted on a print sleeve
- "Steel Base" – metal backing plate for magnetic drum
- "Film" – film

If Grapholas 10.1 or higher is installed on the CDI, a plate database is shown. When the desired plate manufacturer ***"Brand"*** (4) or the plate type ***"Plate"*** (5) are not available, the option ***"other"*** can be selected:

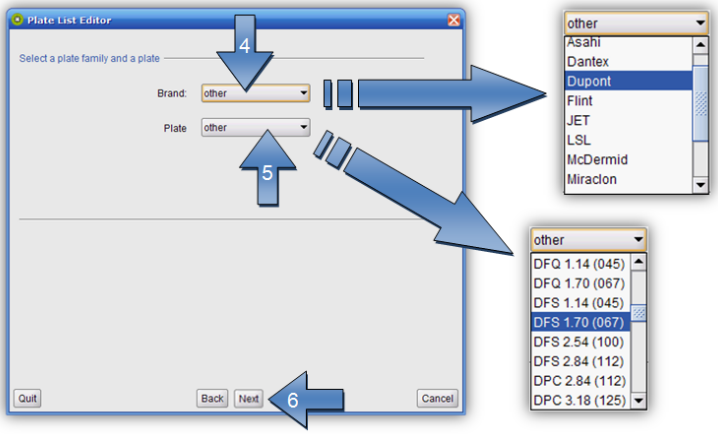

"Name" (7) determines the display name in the plate list and ***"Thickness"*** (7) the plate thickness. For sleeves, the circumference is entered in the ***"Circumference"*** field (7):

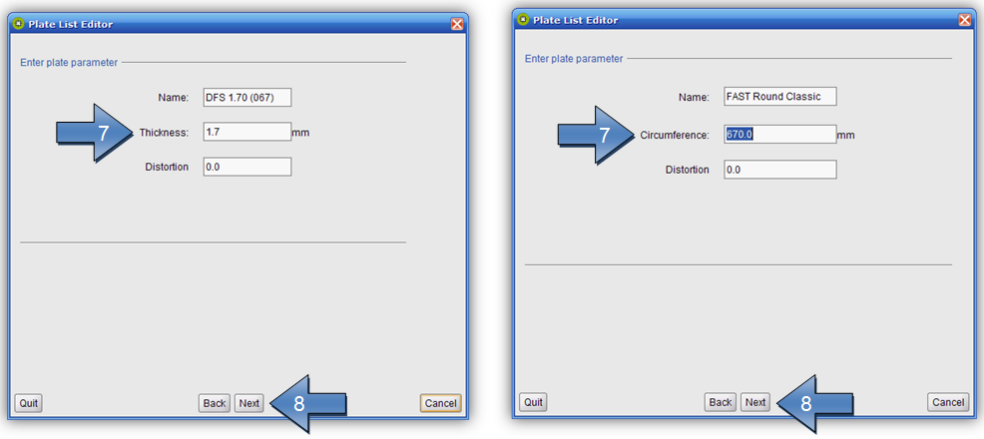

Additionally, the output in the ***"Distortion"*** field (7) can be distorted in circumference direction. The input is made as a percentage. If you enter "5.0", the output is enlarged by 5 percent in circumference direction. Entering "-5.0" would downsize the output accordingly.

Under ***"Manual"*** (9), enter the values for ***"Speed"*** (10) and ***"Laser Power"*** (10). The setting ***"Energy"*** (9) sets the ***"Laser Energy"*** (10), and speed and performance are selected automatically according to the resolution:

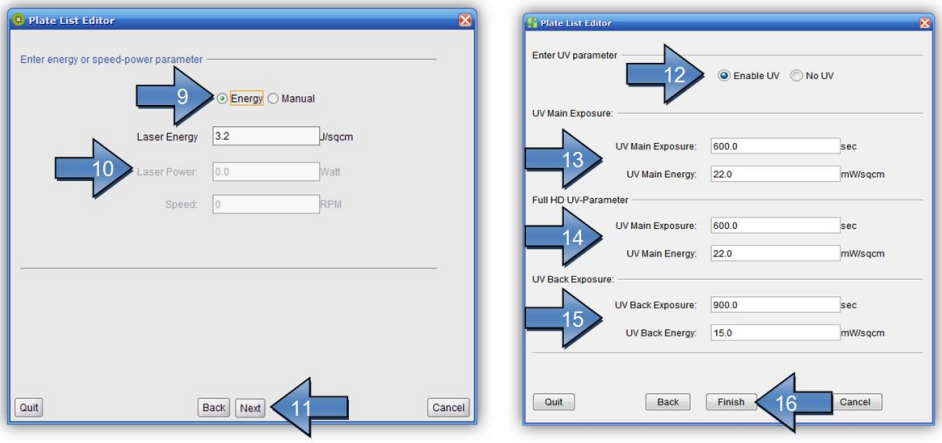

With Inline UV, enter for the front exposure the values ***"UV Main Exposure"*** (13) and ***"UV Main Energy"*** (13) and with automatons, enter for the back exposure the values ***"UV Back Exposure"*** (14) and ***"UV Back Energy"*** (14). You can disable the UV exposure by checking ***"No UV"*** (12).

UV2 exposure parameters are specified in section ***"Full HD UV Parameters"*** (14) when the CDI has been prepared for Full-HD Flexo.

"Finish" (16) saves the plate.

8.7.2 Changing the Plate

First select the desired medium ***"Plate Type"*** (1), then check ***"Edit"*** (2) and press ***"Next"*** (3) to go to the next menu:

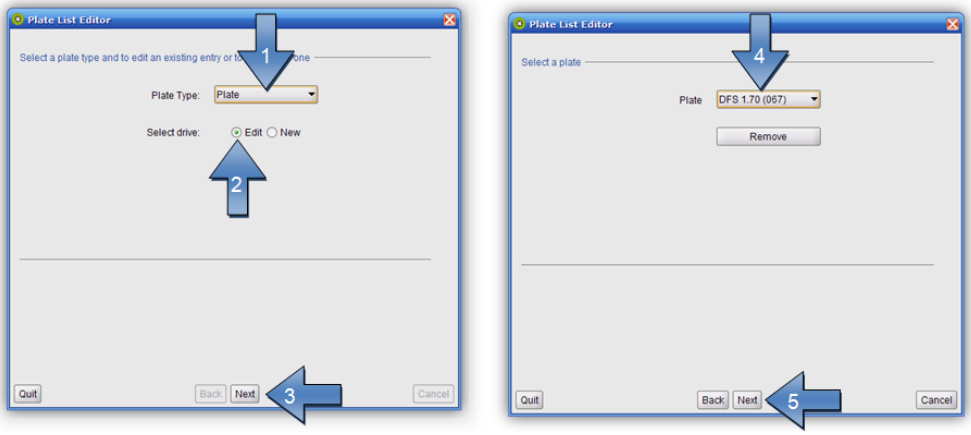

After setting the desired ***"Plate"*** (4), you can change all parameters except for the plate name. ***"Next"*** opens the next menu.

8.7.3 Deleting the Plate

First select the desired medium ***"Plate Type"*** (1), then check ***"Edit"*** (2) and press ***"Next"*** (3) to go to the next menu:

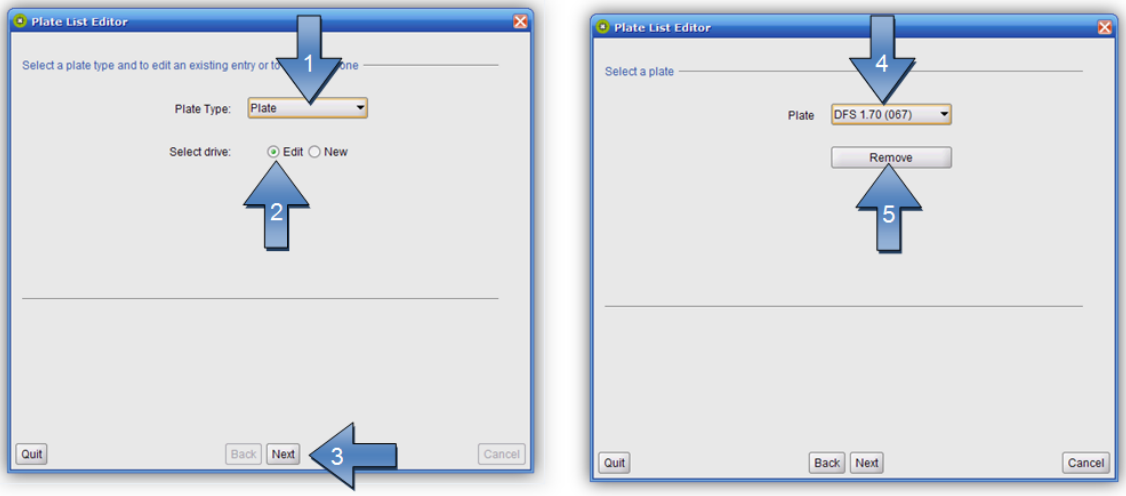

The desired plate ***"Plate"*** (4) is set and removed by pressing ***"Remove"*** (5).

8.8 Exposing Plate Borders

The *"Expose frames"* option can be activated in the basic settings of the "Merger" under *"Edit – Preferences…"*, giving the plate more stability in the washer.

The left and the right border can be set in the *"Drum Window"* and is now shown in white. When the TIF output is negative, the border is displayed in black.

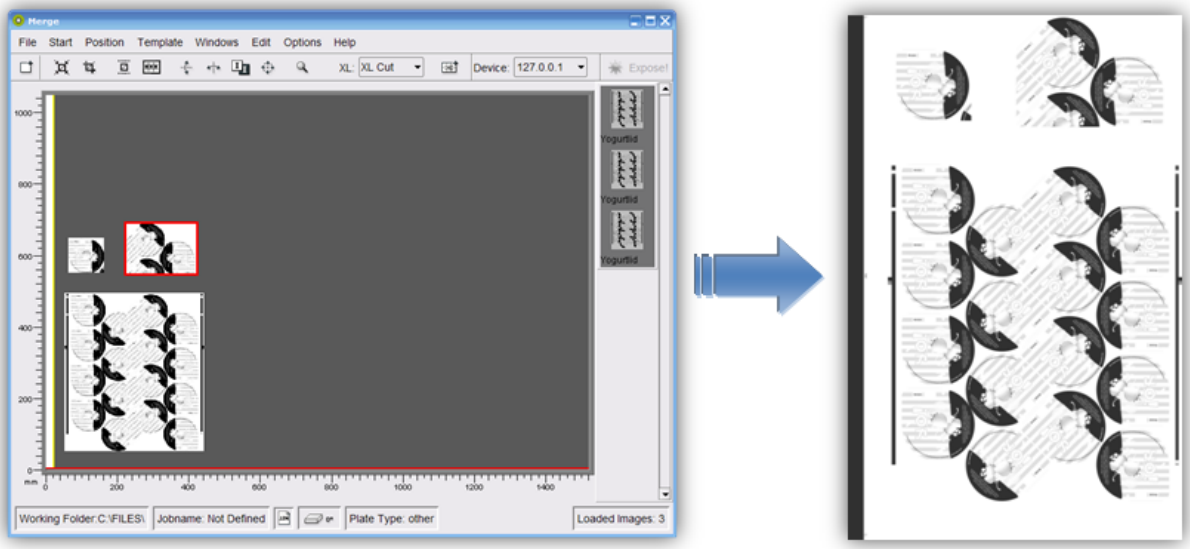

8.9 Templates

If these functions are not displayed, they can be activated in the basic settings.

The positions, image sizes, image resolution and plate parameters are stored in the template in order to position images quickly at a later time. This working mode is interesting for register pinwheels such as, e. g., for Letterpress.

8.9.1 Creating a Template

To create a template, you first position the required images onto the working surface and then select the plate type. This compilation is then saved by pressing *"Template - Save Template"*.

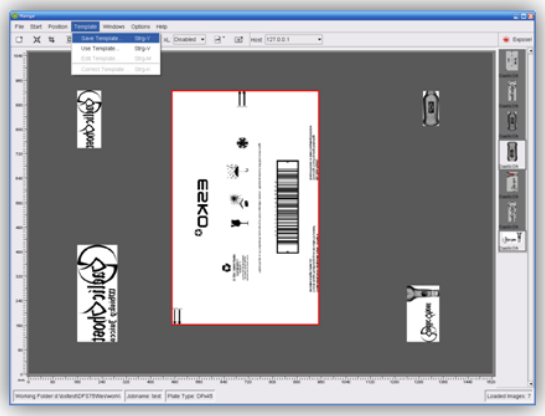

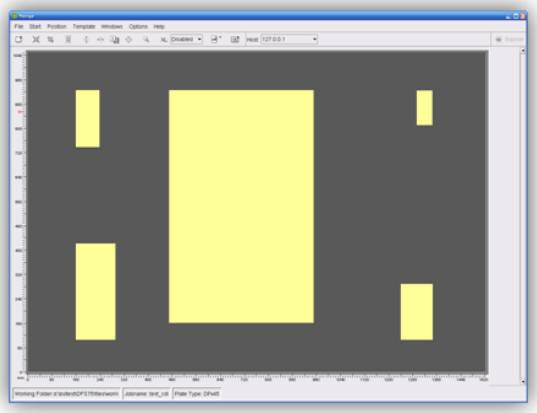

8.9.2 Loading a Template

"Template - Use Template" loads the template. This is only possible when no other images are loaded in the "Merger".

The stored positions and sizes are shown as yellow fields. After loading the images, they can be positioned in the yellow fields.

The images must be within a certain size tolerance in order to be assigned to a field.

8.9.3 Modifying a Template

After loading the template and positioning all the images, the mask can be opened using *"Template - Edit Template"*. Now you can change all parameters as required and save them using *"Template - Save Template"*.

The modified template can now be loaded using *"Template - Use Template"*.

8.9.4 Moving a Template

"Template - Correct Template" opens a new program in which the template can be loaded using *"File – Load Plate"*.

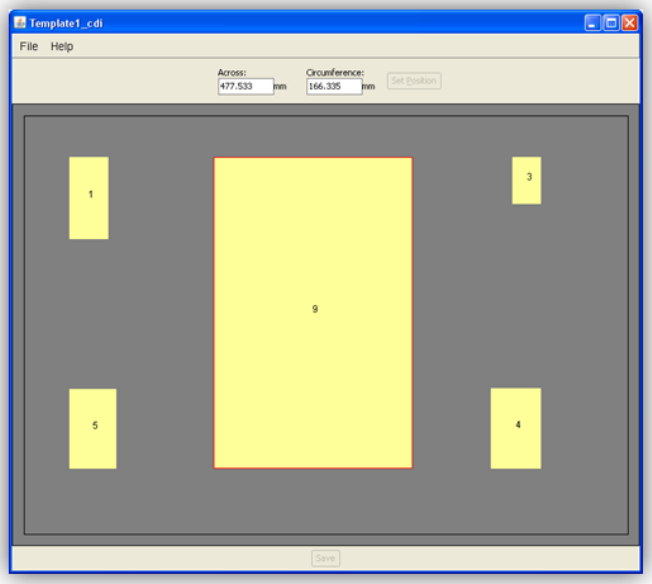

The position of single images or of several images can be changed horizontally by *"Across"* and vertically by *"Circumference"*. The value is entered absolute or relative to the current position, ENTER is then pressed and the value is set by *"Set Position"*.

Several images are marked by pulling a square around the required images with the left mouse button pressed.

The template is saved by clicking the *"Save"* button.

8.10 Job Information

An HTML or XML file with the respective job name is created in the *"HTM Target Folder"* output directory for each sent job.

All important information concerning the job is stored in that directory. The output directory "d:\files\output\html" is preset.

8.11 Loading Images via "*Drag & Drop*"

Image files (LEN and TIF) can directly be dragged into the right image bar of the "Merger" from the Windows Explorer. First, the data is copied into the working directory, then it is loaded. If the *"Ctrl"* key is pressed at the same time, the files are always copied.

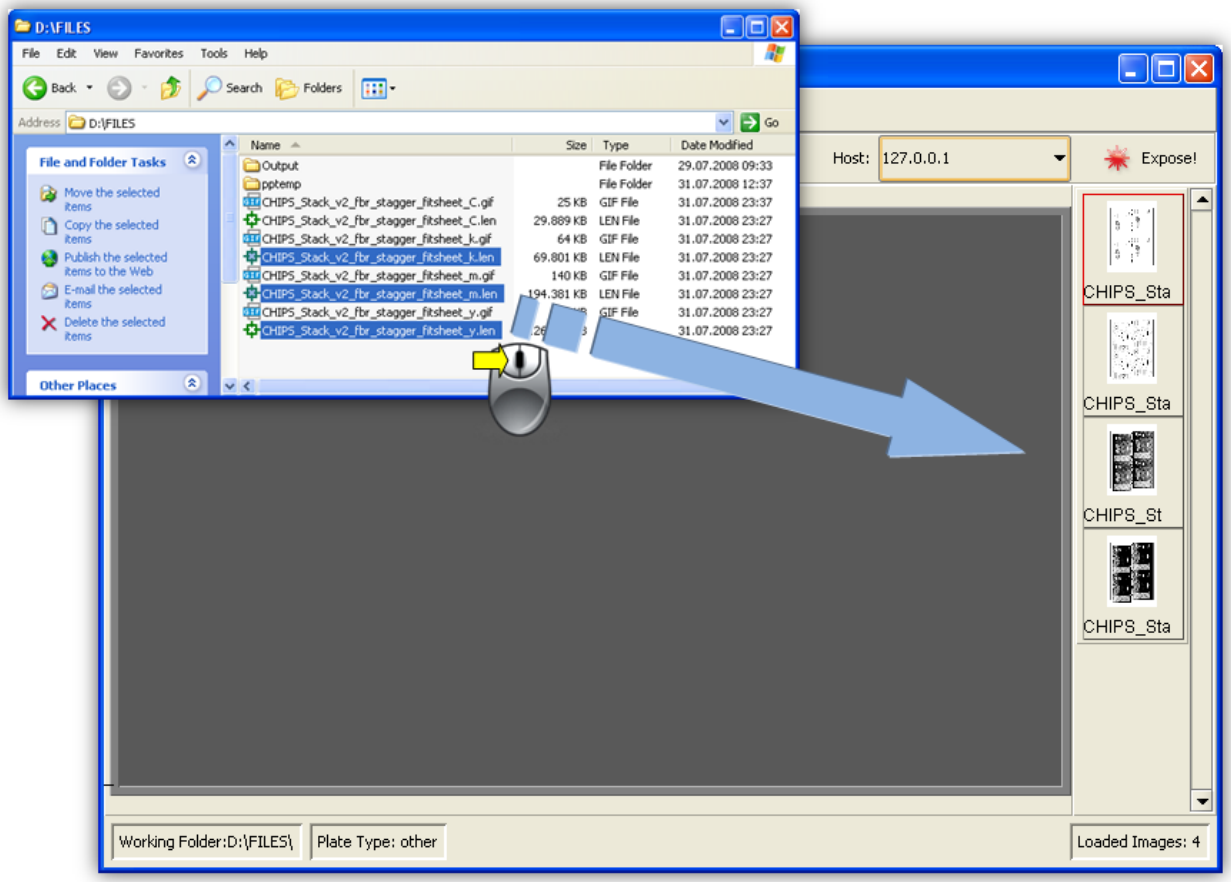

8.12 "Unique ID"

All LEN and/or TIF files from an AE12 system contain a unique code which can be read by the "Merger".

As soon as the "Unique ID" option is activated under "Options – Configuration", this code is added to all images.

8.13 Basic Merger Settings

The basic settings of the "Merger" can be changed via the menu item *"Options – Preferences…"*:

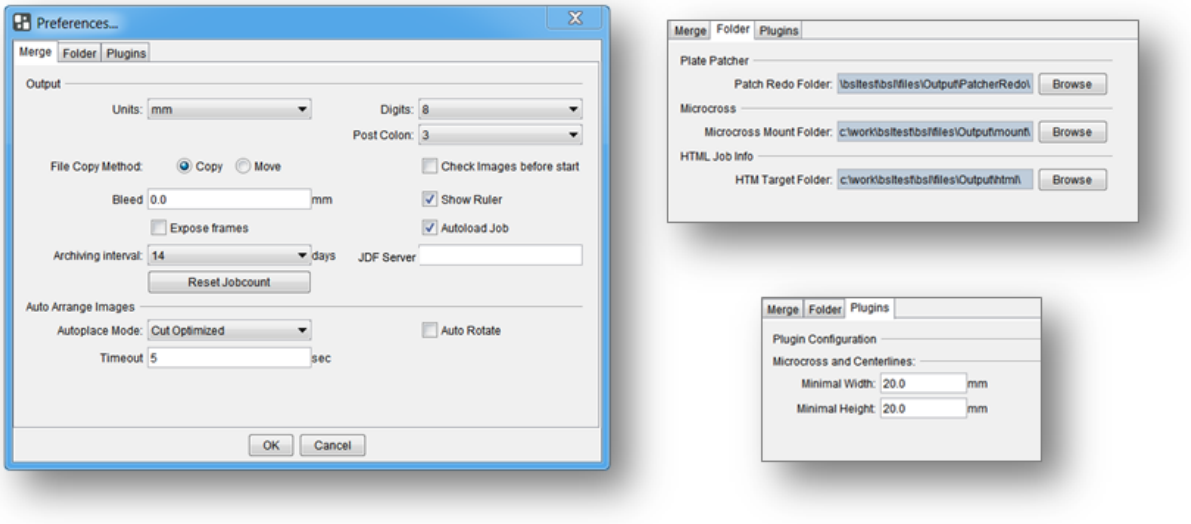

"Units" switches between "mm" and "inch".

"Digits" and *"Post colon"* set the amount of numbers and/or decimal points.

"Check Images before start" checks the images of all outgoing jobs.

"File copy method" sets the behavior while loading images. With the setting *"Copy"*, the files are always copied; if *"Move"* is selected, they are deleted from the source directory.

"Bleed" sets the border during automatic cropping.

"Expose left frame": When activated, the left border is exposed to provide more stability for the washer.

"Show Ruler" activates or deactivates the ruler.

When restarting the "Merger", *"Autoload Job"* actuates automatic loading of the last job.

"Archiving Interval:" determines the number of days after which the HTML overview files and the files of the "Mergelog" directory are archived in a ZIP file.

"JDF Server": Enter IP number or computer name of JDF server.

"Autoplace mode:" sets the method (mode) of how the images are automatically arranged on the working surface. The methods to be selected are fast, space-optimised and cut-optimised positioning.

In most cases, the fast positioning method is sufficient. The space-optimised positioning method tries to position the images until the maximum time "Timeout" is reached. The cut-optimised positioning method positions the images so that the plates can be better cut manually afterwards.

"Auto Rotate" activates rotating during automatic positioning to save more space.

In the *"Folder"* window, the preset output directories can be changed.

The job information is saved in the *"HTM Target Folder"* directory.

Under *"Plugins"*, the minimum size for *"Microcross"* and *"Centerline"* images can be entered. The images are automatically enlarged to this size.

The "Merger" must be restarted after any change.

9 Exposer

The "Exposer" starts the jobs sent from the "Merger". In addition, a focus search or, for sleeves, a zero point search can be performed here.

The "Exposer" is divided into four areas:

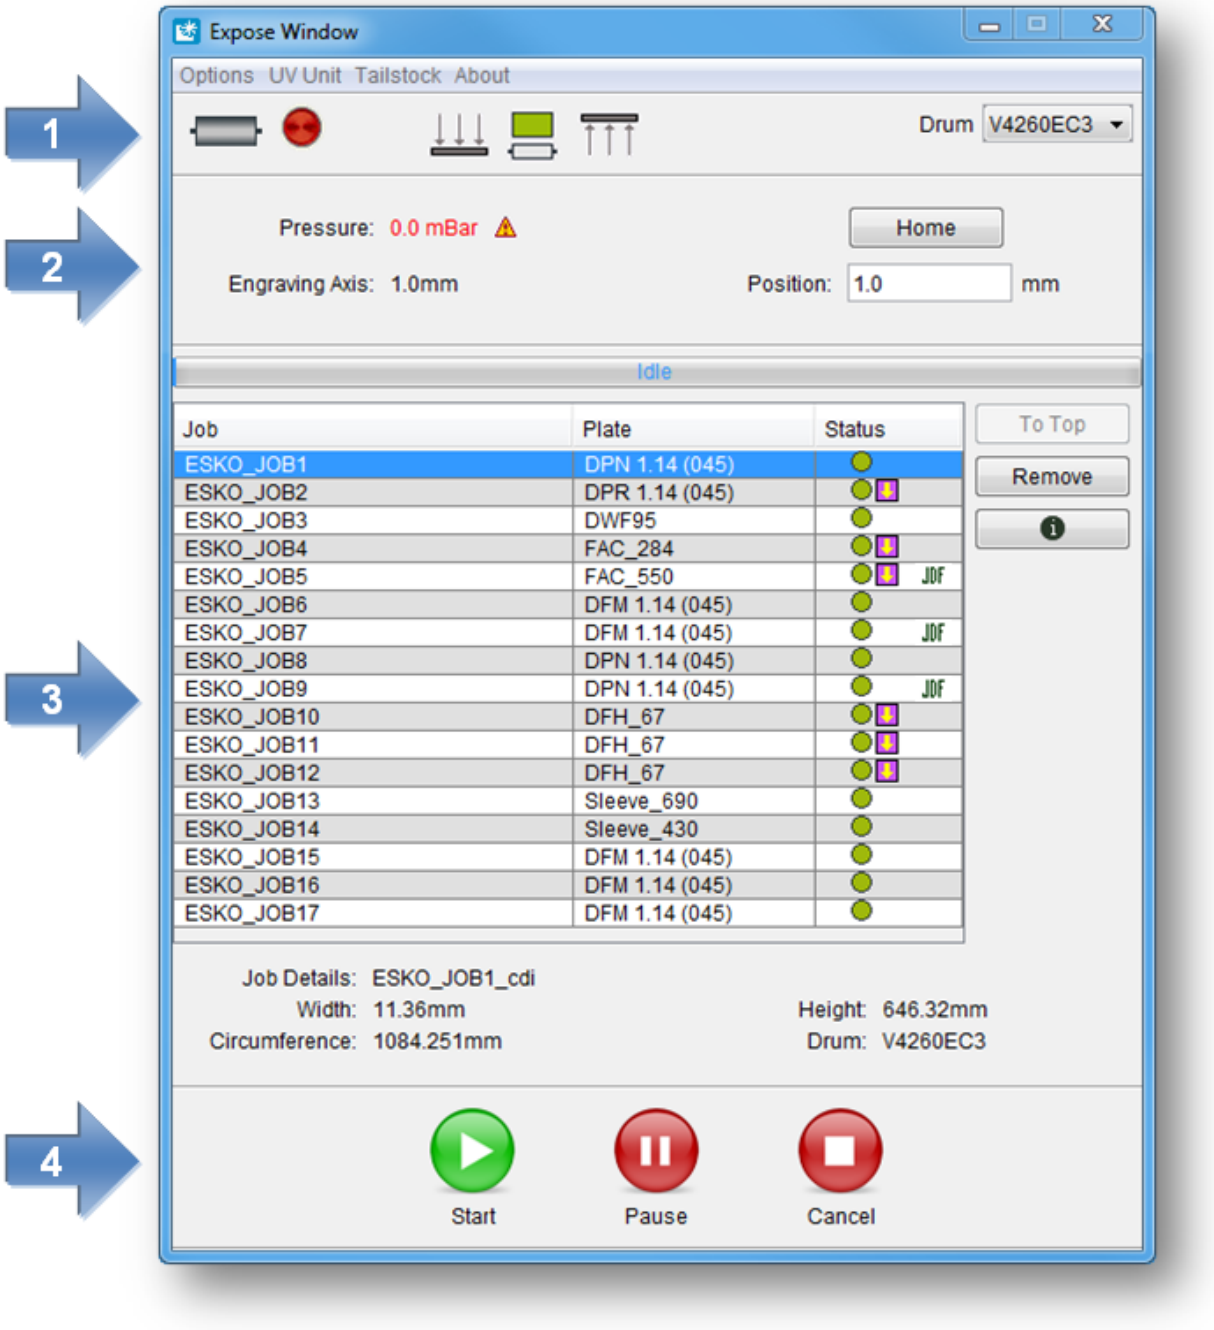

Area 1: Status Displays and Controls

Area 2: Vacuum Display and Position Control

Area 3: Job List and Status Display

Area 4: Machine Controls

9.1 Status Displays and Controls

The CDI status is displayed with icons. Depending on the version, the status of the UV exposure and the automaton can be displayed here.

If several drums are registered, the currently used drum can be selected in the *"Drum"* field.

When using "Advance Cantilever", an automatic search for the clamping bar is carried out as soon as "Drum Sleeve" is selected.

9.2 Vacuum Display and Position Control

"Engraving Axis" displays the current position of the laser. The desired start position for the imaging process is entered in the *"Position"* field and run by pressing [ENTER]. *"Home"* moves the laser back to 1 mm.

"Pressure" displays the vacuum. For full plates, a vacuum of over 900 mbar is required. The engraving process cannot be started unless the required value has been reached. For partial plates, the vacuum is not analysed since the speed was reduced to a safe value.

9.3 Job List

The *"Job"* name, the *"Plate"* type and the job *"Status"* are displayed for each job:

Completed job.

Imaging has started.

Imaging has stopped.

The job contains parameters for UV front exposure.

The job contains parameters for UV back exposure.

Data is loaded.

Error when transferring data.

JDF Job status is shown in the AE10.1 Pilot.

Repetition after JDF exposure is not possible.

For the selected job, the *"Width"*, *"Height"*, *"Circumference"* and *"Drum"* information is shown below the job list.

"To top" can be used to move the job selected to the top position for imaging. *"Remove"* deletes the selected job.

Right-clicking on the job shows additional information.

Right-clicking on *"Status"* changes the position of the job, even during operation.

9.4 Machine Controls

- **Start** Start the selected job.
- **Pause** Stop the current imaging process.
- **Cancel** Cancel the current imaging process.

9.5 Changing the Priority

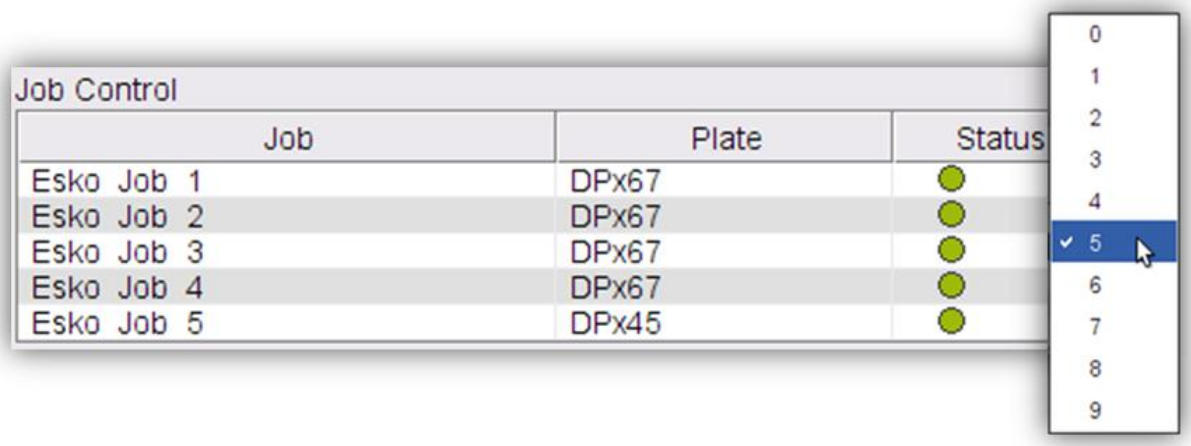

By right-clicking into the status column, you can change the position of a job during operation.

9.6 Job Information

opens a new window with the job overview.

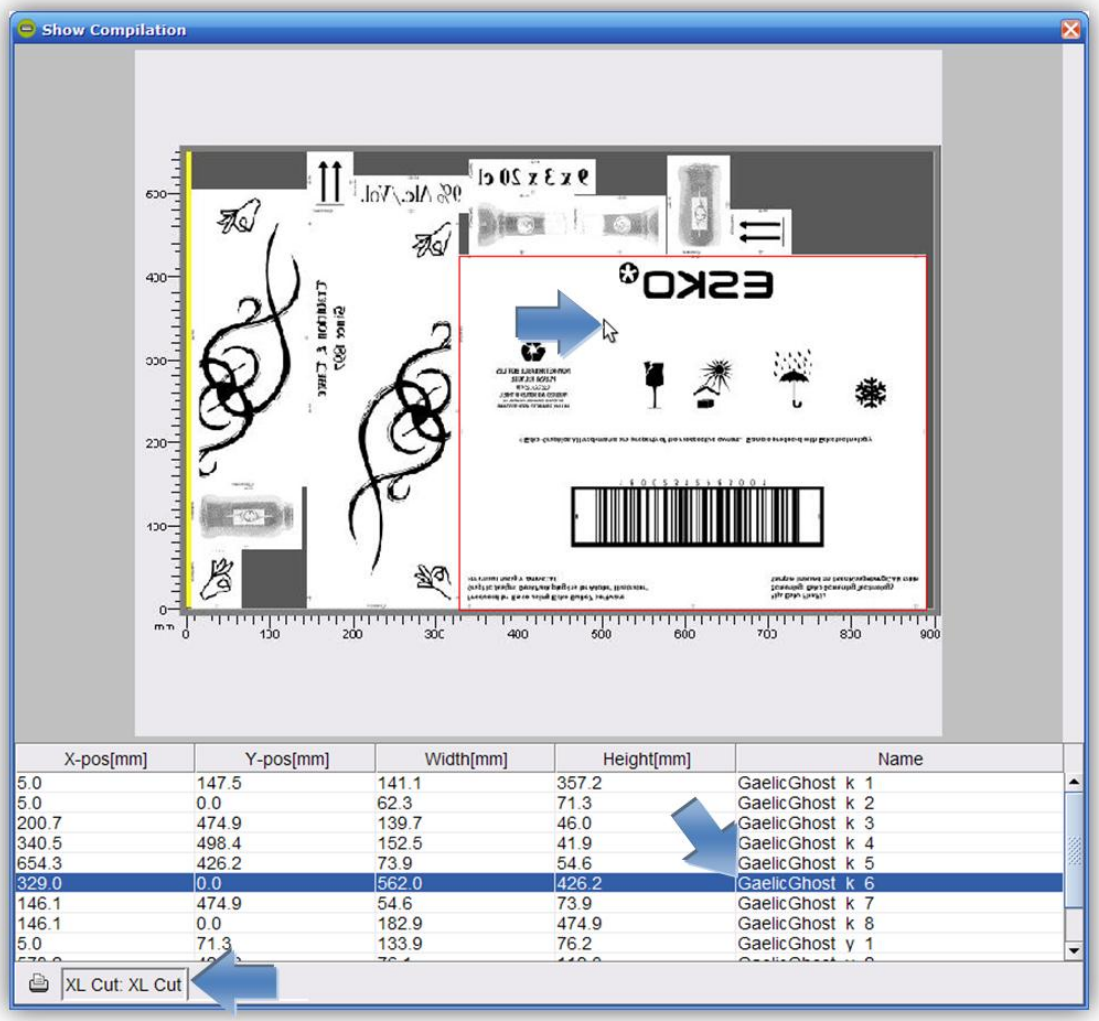
Show Compilation
X-pos[mm] Y-pos[mm] Width[mm] Height[mm] Name
5.0 147.5 141.1 357.2 GaelicGhost k 1
5.0 0.0 62.3 71.3 GaelicGhost k 2
200.7 474.9 139.7 46.0 GaelicGhost k 3
340.5 498.4 152.5 41.9 GaelicGhost k 4
654.3 426.2 73.9 54.6 GaelicGhost k 5
329.0 0.0 562.0 426.2 GaelicGhost k 6
146.1 474.9 54.6 73.9 GaelicGhost k 7
146.1 0.0 182.9 474.9 GaelicGhost k 8
5.0 71.3 133.9 76.2 GaelicGhost y 1
XL Cut: XL Cut

When the mouse is above an image in the upper overview, the respective list entry is highlighted.

The list contains the positions, dimensions and names of the job images.

In the lower status bar, the XL CUT name and the template name are displayed. Furthermore, the overview can be printed by clicking on the printer icon.

This information is only available if the job on the CDI was sent or the PlatePrep corresponds at least with the "Version 10 Patch 2".

9.7 Starting a job

The desired job is selected from the list and run with the *"Start"* button. The job's remaining time is displayed on the bottom of the status bar.

"Pause" stops the engraving. *"Start"* can be used to resume it, but may cause a seam in the imaging. *"Cancel"* cancels the job.

When the exposure is completed, a dialog window is displayed where the job can be deleted or put back into the queue.

9.8 Focus Search

The focus search is used to set the distance of the laser to the plate in place. The focus setting is very important for achieving the optimum imaging quality:

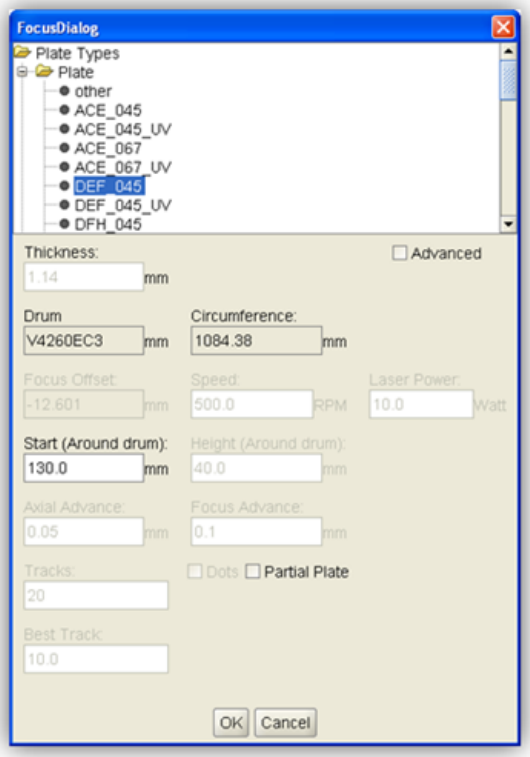

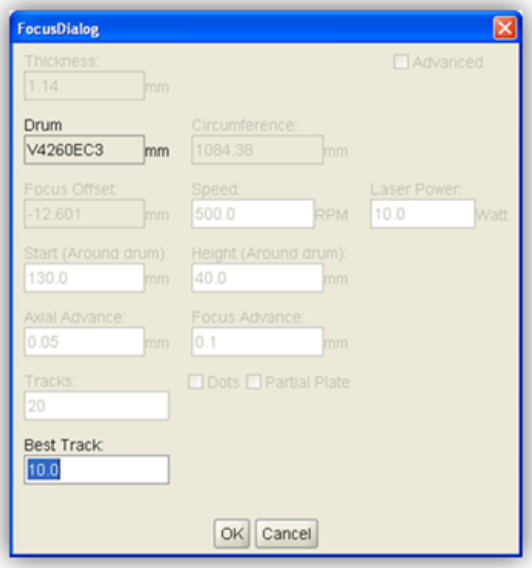

The plate in place has to be selected under *"Plate Types"*. The start of the focus search is set using *"Start (Around drum)"*.

For partial plate mode, the *"Partial Plate"* option has to be activated.

The focus search is lined up as new job in the "Exposer" by clicking on *"OK"* and started as normal job in the "Exposer".

The deactivated input fields can be enabled using the *"Advanced"* button.

When the focus search is ended, the "FocusDialog" dialog box is displayed in which the position of the thinnest line in the focus search has to be entered in the *"Best Track"* field. *"OK"* changes the focus setting in line with the input.

9.9 Zero Point Search for "Sleeves"

To determine the zero point on a sleeve, the job to be exposed is lined up in the "Exposer" first and then the zero point search is started via "Options". The parameters are displayed in a new window; an *"Offset"* can be entered in advance:

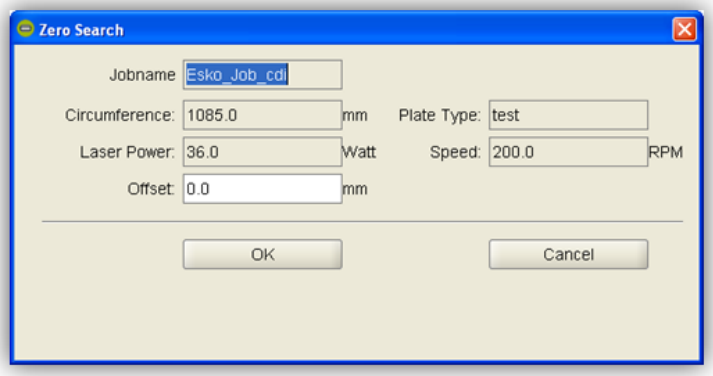

By pressing "OK", the job "Zero_esko_special" is lined up in the "Exposer". A ruler will be engraved on the sleeve. The zero point on the ruler corresponds to the zero point of the sleeve.

9.10 Determining the Full HD UV / Pixel+ Parameters ("Steptest")

For each plate type, the Full HD UV / Pixel+ parameters must be determined.

The ***"Step Test"*** uses the first job in the "Exposer" to automatically develop a test series with 16 different parameters.

To do so, the top job must have been created using the Full HD UV or Pixel+ option and must still fit on the plate after the broadening.

After printing this plate, the determined parameter is loaded into the system by ESKO service technicians.

9.11 UV Exposure "UV Inline" (Option)

"UV Inline" exposes the upper side of the plates. This function can be activated or deactivated via *"UV Unit"*. When the CDI is restarted, the UV exposure is automatically activated unless the external cooler is switched off.

The service technician adapts the UV parameters for the desired plate types. If no UV parameters are adapted for some plates, they will be started without UV exposure. If the UV unit is deactivated, a warning is displayed when starting the exposure if UV parameters are available for this plate type.

The status of the UV unit is displayed with the following icons:

UV unit activated

UV exposure activated

9.12 Control of the Automaton

9.12.1 UV Back Exposure

The UV back exposure is available as an option for the automaton. This function can be activated or deactivated via *"UV Unit"*. When the CDI is restarted, the UV back exposure is automatically activated.

The service technician adapts the UV parameters for the desired plate types. If no UV parameters are adapted for some plates, they will be started without UV back exposure.

The status of the UV back exposure unit is displayed with the following icons:

UV back exposure unit activated

UV back exposure activated

9.12.2 Control and Status Displays

Under "APL", the automatic function of the automaton can be activated or deactivated. The status of the automaton is displayed with the following icons:

No plate loaded.

The plate is located on the drum.

The plate is located in the tray.

The plates are located on the drum and in the tray.

9.13 Control of the Tailstock – CDI Cantilever

For the Cantilever, the tailstock can only be moved when the cover is closed. There must not be any objects in the tailstock's area of movement.

In the "Tailstock" menu, *"Lock"* can be used to close the tailstock and *"Unlock"* can be used to open the tailstock.

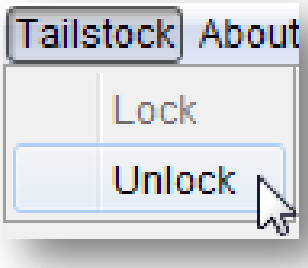

9.14 Interlocks and Errors

An active interlock prevents imaging from starting and is symbolised in the "Exposer" by a crossed-out drum:

Left-clicking this icon updates the interlock display.

Active machine errors and interlocks are displayed in the section *"Active Interlocks"* with a red point.

UV system errors are displayed in the section *"UV Unit"* and can only be reset in this section by selecting the "*UV Reset"* button.

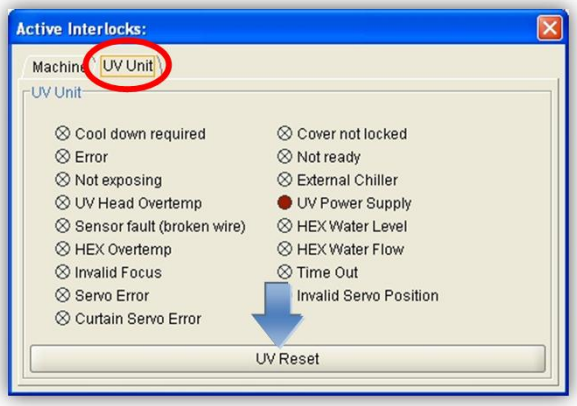

"Limit Switches" shows the status of the different axes and is only used as information.

If the vacuum is too weak, this is also displayed in the status display in the form of a red plate under the roller.

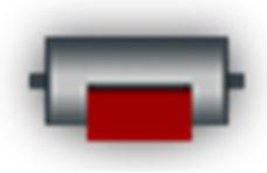

The status is reset by clicking on the drum.

10 Support Europe

To contact ESKO, please visit www.esko.com.